

EXHIBIT B

Illustration Gample 1

W. Ja

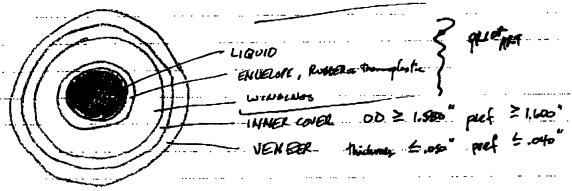

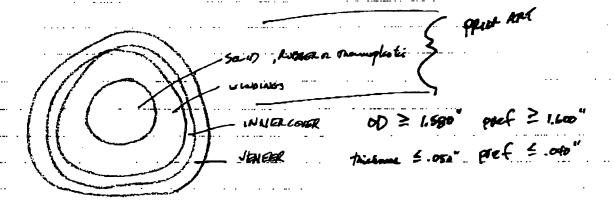

SELIO, RISTIER OR HUMBERS

SELIO, RISTIER OR HUMBERS

WENTER Thickness 5.000" Pref 5.040"

MONTH OF THE WIDE

CE ENC.

thin layer, we may have to try compression molding. (or maybe go down to 1.300 (10TZPC) correspondently work with year to mold the enantle loyers for now. (hand plashi) for the months layer. IF we cannot investion more this Surgn. Chris also has some 1935 high spinning project X-2 balls, I would the to try matury some with a larger In perpendition for the most those of Cone, hander manth and soften Unethane. We can probably stant with 1,580" colls and "the Quid

30 80 60 LATE WARTH 15 12 12 50 mg Gran for more grown K-11 1.500 BT 1.69% MATER 67% 1.182 Br 1.630 BIRTHIN 55% 1.130 & 1630 smy 9940 1200 PF 1630 AS 15th 0691 fg 1.5h HZ/ 1,180 eq 1,630 AB! OSC (1.562 BY 1830 BY 1837) 1.78 of 1.630 Ags Dean Saell Senice Product Development Englace ×-10 K-13 4-14

what other Star months country

1,620

To:

Chris Cavallaro, Jeff Dalton, Bill Morgan, Ken Perry

66:

Doug Jones, Dean Snell

From:

HEBERTE/TITLEIST AND FOOT-JOY WORLDWIDE

Date:

Subject:

Co-Injection Molded Cups - Update

The first round results of the overall spin performance of the "co-injection molded" ball look to be very promising!

Remember, Code A is the ball made with cups using an outer shell comprised of 8320 soft Surlyn, and an inner region of 7930 Surlyn. 70% of the cup's volume is 7930 - 30% 8320.

Code B is the opposite...7930 shell, 8320 insides. 30% 7930, 70% 8320

Now...Check this out, baby!

Ball	Spin Driver	Spin 8 iron	Spin Full Wedge	Spin HalfWedge
HP2 Tour	3250	8300	9750	5875
Code A	3175	8100	9500	6150
Code B	3300	8250	8925	5150

Cool, huh?

On longer shots, the bail's overall construction appears the key determinant on a bail's initial spin rate. On shorter shots, the bail's surface composition plays an increased role on the determinant of the bail's spin rate. Although this theory has been tossed around, we've never really made a "variable spin" product before. Bail A appears to have answered the age-old performance request - "Can you make a maximum distance bail that still spins a lot?" The answer may now be "yup."

Some ideas for further study come to my mind:

By varying the ratio volumes / hardnesses of the inner and outer layers, I think we can make a ball whose transition from "distance ball" to "spin ball" happens at the ideal point...let's say at a 5 iron type condition for a typical tour player? This same ball will probably make the transition a little ariler for average players, oh well. Maybe a better

idea is to figure out who this ball's for, and then make it right.

By substituting 8140 for 7930 in the "code A" construction, we may have been able to tweak a higher velocity version of the same ball (code A was about 251.5 ft/sec). If anything, it would've spun slightly less on the driver, which would've been fine by me (and everyone else using it).

Doug, when the balls get back from Gateway, please conduct a shear and cut test on these balls. My hunch is that "code A" won't win any trophies in the shear test competition (although it did do well in swimsuit). As a matter of fact, they may already be too shear damaged to use. We'll see.

Also Doug - I know you were going to conduct an "impact footprint" study for Bill Worgan, examining the effects of cover/core/loft/swing speed/everything else on the ball's impact footprint diameter. Please add these constructions into your experiment.

Meanwhile, Chris and Jeff. I think we should meet to discuss a designed experiment to map out material and ratio selection? We should also inform Troy of these great initial results.

Am I missing or forgetting anything?